

FOREVER

call Me!2

MANUAL

Smartwatch KW-60

(long version)





Thank you for buying Setty brand product. Before use, read this instruction manual and keep it for future reference. Do not

open the device on your own – any repairs should be carried out by a serviceman. Only use original parts and accessories supplied by the manufacturer. The device must not be exposed to direct fire or other heat sources. We hope that Setty will meet your expectations.

Introduction

Before using the kids watch, carefully read the instruction manual to ensure correct operation. Kids watch is a small telecommunication device, used to locate its position and send data. Operation of the device is based on GSM/GPRS mobile network.

Important!

The device requires installation of a micro SIM card with active service, allowing to make and receive calls, with no PIN lock. It is recommended to deactivate voicemail. When sending information regarding location, the watch will require access to mobile Internet, therefore, you should buy at least 1 GB package. Use of the watch may be associated with fees for using the network and calls, in accordance with the operator's tariff.

Specification

Display: 1.44" 128x128 px

Touch screen: yes

Standby time: do 2-3 days

Charging time: 2-3 hours

Strap length: 230 mm

Battery: 400mAh

Camera: yes

Microphone and speaker: built-in

Sim card: micro SIM (with no PIN lock)

Compatibility: Android \geq 5.0 , iOS \geq 10.0

Device description

1. Speaker
2. Micro USB connector
3. Microphone
4. Camera
5. Answer the call / Turning on the flashlight (after pressing twice)
6. Flashlight
7. On/Off/SOS button/Return to mine screen
8. Function touch button - return to the start screen

The set includes

- smartwatch
- charging cable
- user manual

Charging

It is recommended to use a charger of output parameters of 5V – 1A. Charger is not included in the set. Full charging time of the watch is approximately 2 hours. Open the plug protecting the micro USB port, then connect the included micro USB cable and connect the device to a power source.

1. Installing the SIM card

Always make sure your watch is turned off before inserting or removing the SIM card. Never insert or remove the SIM card when the watch is turned on. Open the back cover of the watch by gently prying it at the top and sides until the latches are unfastened. Then remove the battery, taking care not to damage the battery cables. Remember its position. Open the micro sim card cover by sliding it slightly to the right, and then insert the SIM card into the slot in such a way that the sim card chip is facing upwards to the watch screen. Then close the lock by sliding to the left. Place the battery in the watch in its original position, then close the back cover by pressing the latches.

2. First run

After installing the SIM card in the watch and charging the device, you can start it by pressing and holding the on button.
- After starting, the watch connects to the mobile network.

3. Device operation

We operate the device via a touch screen. By sliding your finger on the screen, you can switch between individual functions and you select a given function by pressing the screen.

1. Device home screen showing the current date and time as well as battery level. On this screen, we also see the icon for connecting to the mobile network and the icon for the amount of contractual awards received.
2. Enables you to make a phone call by manually entering the number.
3. The phone book gives you access to 10 contacts defined using the application.
4. Allows you to take a photo that will be saved in the album.
5. Access to the last photo taken. Possibility to preview, send or delete it. Each subsequent photo taken overwrites the previous one.
6. A simple math game with three levels.
7. It allows you to send voice messages and receive text and voice messages.
8. It allows you to start the flashlight built into the watch.
9. It allows you to read the registration QR code for the device and the application QR code.

4. Use of application

Download the „Forever Care“ app for iOS or „Forever KidsCare“ for Android.





Account and watch registration:

In the registration window, enter your email address, password and the area of use of the watch. Then enter or scan the watch code (REG CODE) found on the bottom of the box and on the watch.

Functions

- **Chat:** Send a text or voice message to the watch by typing it on the keyboard or recording it using the phone's microphone. You can also listen to the voicemails sent from the watch here.
- **Route:** select the date and time slot to display the traveled route.
- **Map:** Select the map icon to view the current location of the watch.
- **Safety zone:** designate a safety zone, when the watch will found outside the selected zone, you will receive a notification from the app.

- **Reward:** Select the number of rewards you want to send to your child. After approval, the information about the award will be sent to the watch.
- **Alarm clock:** alarm clock settings. Set the desired time and frequency of repeat.
- **Find Watch:** Select a feature to find your device if it's near you. The watch will ring to inform you of its location.
- **Notifications:** This is where you get and preview any notifications and alarms you receive from the watch.
- **Remote camera:** take a photo using the watch camera and receive it on your phone. The captured image appears after a certain waiting time, depending on the signal strength of the cellular network.
- **My profile:**
 - Personal data: Your account settings
 - Device list: Add, edit or remove a connected devices
 - Change Password: Change the password for your account.

Settings

- **SOS numbers:** when the watch user presses and holds the SOS button, the watch makes an automatic emergency call to three contacts defined on list.
- **Voice monitoring:** enter the phone number to be called from the watch in order to listen to its surroundings. Pick up the call and check what's happening nearby. The user of the watch has no notification that such a call has been made.
- **Do not disturb:** Select the time during the day when the user of the watch will not receive phone calls.
- **Location mode:** select normal mode - refreshing the watch's location once every ten minutes, power saving - once every hour, tracking - once every minute.
- **SMS notifications:** enter the number to which you want to receive SMS notifications about events such as: low battery level in the watch, triggering the SOS alarm using the watch button.
- **Phone book:** Define up to ten contacts that the watch user will have in the phone book.

- **Time zone:** set your time zone than the device shows the cor-

rect date and time on.

- **Language:** Choose language for your device from the available.
- **Settings switch:** Enable or disable the watch function.
- **LBS Location:** Enable or disable location using network operators antennas.
- **Turn off watch remotely:** watch will be turned off.

FAQ

The application does not receive commands and shows information that the watch is disconnected from the network.

– Check whether GMS signal is correct– whether the range columns are available / visible on the display. - - - If they are crossed out, please turn off your watch.

Check if the SIM card is properly installed in the watch, if it supports 2G internet and if there is an internet data package available.

Turn on the device. If the range columns are still crossed out, go to the next point.

- Check if there are data transfer arrows, if not, set APN (Access Point Name - specific packet network, e.g. internet):

Please send a text message to the number of the watch with the content:

`pw,123456,apn,YYYYY,,,XXXXX#`

* the **X** character stands for digits of MNC and MCC codes assigned to a specific operator, e.g.:

26003 – ORANGE

26001 – PLUS

26006 – PLAY

26002 – T-MOBILE

the remaining digits of the codes are available at manual/forever.eu or www.mcc-mnc.com/

* Instead of the **Y** characters, enter the operator's individual APN name.

After sending the message, wait several minutes for KidsWatch to download the settings from the network. Data transfer arrows will appear.

- Please send a text message to the number of the watch with the content: pw,123456,ts#, in response, the watch will send us the parameters of the watch. An example:

```
ver:G36WS_YDE_V1.1_2019.12.19_09.45.40;  
ID:1234567890;  
imei:123456789012345;  
ip_url:52.28.132.157;  
port:8001;  
upload:600S;  
bat level:96;  
language:1;  
zone:10.00;  
ec:0;  
NET:OK(73);
```

Check the data received in the SMS with the watch number.

- If the number ID/IMEI/REG CODE is different from the badge on the watch or the bottom of the package, set a new IMEI number.

Please send a text message to the number of the watch with the content: pw,123456,imei,xxxxxxxxxxxxx# where X are the numbers from the badge - the watch, after receiving the SMS with the code, sends back in the SMS response with the correct IMEI number, for example: pw,123456,imei,359614514986574#

Attention

when writing text messages, pay attention to punctuation marks and spaces. This is very important because if the characters are not used correctly, the commands will be misinterpreted by the watch and will remain unanswered.

Could not call watch. The signal is busy or the subscriber does not answer

Reason: The watch does not recognize the incoming number or the app is set to do „not disturb“.

Solution:

- Check if the number you are calling from is hidden number.
- Check if there are contact numbers in the application.

The watch only receives calls from numbers previously set in the contacts of the application.

The watch does not show the current time and date

Reason: The watch did not connect to the application server to update the time.

Solution:

- If the watch shows several hours back, check and select the correct time zone via the app.

Rules for safe use

- Read and keep this manual.
- There are no user-serviceable parts inside. All repairs should be performed by a service technician.
- Protect the device from contact with water and moisture to avoid damage to electronic parts. Avoid very high temperatures; they can shorten the life of electronic device components or melt plastic parts.
- Note: Use only original parts / accessories provided by the manufacturer.
- Follow the instructions in the manual. The product is not a toy.

The maximum radiated radio frequency power in the frequency range	
Frequency range:	GSM 900/1800 MHz
Transmit power	33,51/30,44dBm EIRP

Declaration of conformity with the directives of the European Union

TelForceOne Sp. z o.o. hereby declares that the Kids Watch KW-60 Call Me! 2 is in compliance with Directive 2014/53 / EU. The full text of the EU declaration of conformity is available at the following internet address:
www.manual.forever.eu/KW60

Manufacturer's data:

ul. Krakowska 119
50-428 Wrocław, Poland
Made in China



CORRECT DISPOSAL OF USED EQUIPMENT

The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/EU on used electrical and electronic equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to a designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.



CORRECT DISPOSAL OF USED BATTERY

According to the EU directive 2006/66/EC with changes contained in EU directive 2013/56/UE on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with regular household waste, but treated according to the legal directives and local regulations. It is not allowed to dispose of accumulators with unsorted municipal waste. Users of accumulators must use the available collection points of these items, which allow them to return, recycle and dispose of the accumulators. Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of accumulators please contact your local office or an institution for waste disposal or landfill.

www.forever.eu



2011/65/UE

